

Advanced Electronics Technologies: Challenges for Radiation Effects Testing, Modeling, and Mitigation

Kenneth A. LaBel

ken.label@nasa.gov

Co-Manager, NASA Electronic Parts and Packaging
(NEPP) Program

Lewis M. Cohn

Lewis.Cohn@dtra.mil

Defense Threat Reduction Agency (DTRA)

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005



Outline


- **Emerging Electronics Technologies**
 - Changes in the commercial semiconductor world
- **Radiation Effects Sources**
 - A sample test constraint
- **Challenges to Radiation Testing and Modeling**
 - IC Attributes – Radiation Effects Implications
 - Fault Isolation
 - Scaled Geometry
 - Speed
 - Modeling Shortfalls
 - Knowledge Status
- **Summary**
- **Recommendations**

Notes:


1. The emphasis of this presentation is digital technologies and SEE.
2. A discussion of mitigation implications is included in the notes.


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

2




Are you prepared for
what lurks below 130nm?

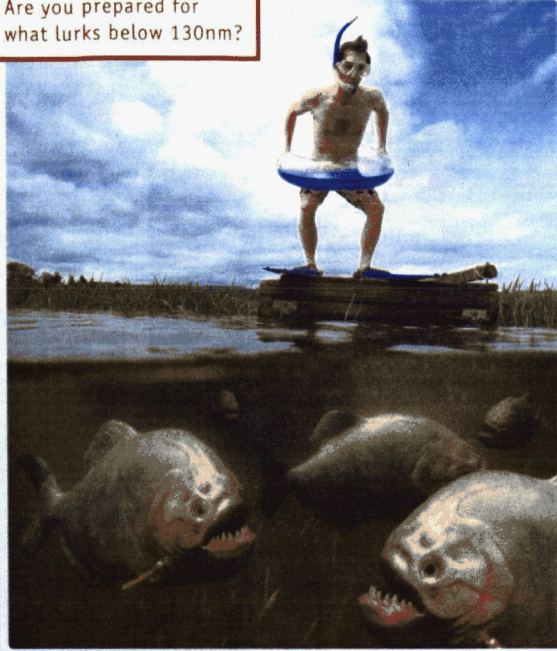




Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005



Changes in the Electronics World



- Over the past decade plus, much has changed in the semiconductor world. Among the rapid changes are:
 - **Scaling of technology**
 - Increased gate/cell density per unit area (as well as power and thermal densities)
 - Changes in power supply and logic voltages (<1V)
 - Reduced electrical margins within a single IC
 - Increased device complexity, # of gates, and hidden features
 - Speeds to >> GHz (CMOS, SiGe, InP...)
 - **Changes in materials**
 - Use of antifuse structures, phase-change materials, alternative K dielectrics, Cu interconnects (previous – Al), insulating substrates, ultra-thin oxides, etc...
 - **Increased input/output (I/O) in packaging**
 - Use of flip-chip, area array packages, etc
 - **Increased importance of application specific usage to reliability/radiation performance**


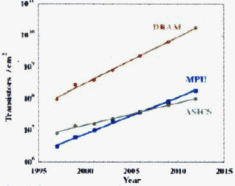



Figure 1-1: The number of transistors per unit silicon area has grown exponentially since the year of their manufacture

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005




Mainstream digital – CMOS scaling

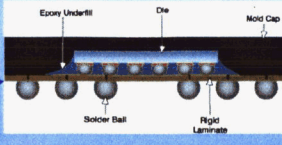

Semiconductor Roadmap

iedm

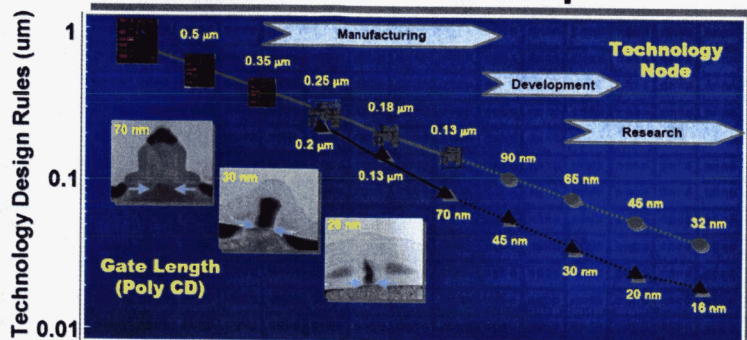

1990 1992 1994 1996 1998 2000 2002 2004 2006 2008 2010

"Moore's Law" continues to drive semiconductor roadmap

- ~ 30% reduction in transistor size with each new technology


From <10k in 1975 to >1B in 2010

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

5



Neutron-Induced Transients vs. Feature Size (FS), Vdd, and Speed

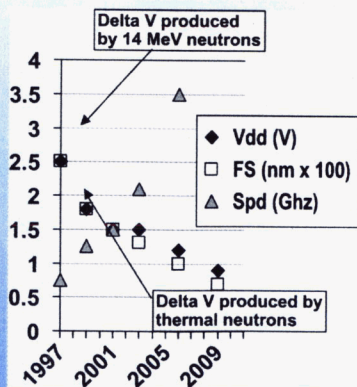



| Year | 97 | 99 | 01 | 03 | 06 | 09 |
|-------------------------|------|------|-----|-----|-----|-----|
| FS (nm) | 250 | 180 | 150 | 130 | 100 | 70 |
| Spd (Ghz) | 0.75 | 1.25 | 1.5 | 2.1 | 3.5 | 6.0 |
| Trans/chip μproc (M) | 11 | 21 | 40 | 76 | 200 | 520 |
| Vdd | 2.5 | 1.8 | 1.5 | 1.5 | 1.2 | 0.9 |

Note the magnitude of the voltage transient equals or exceeds the operating voltage for circuits fabricated using 180nm technology [Mass01-van]


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

6

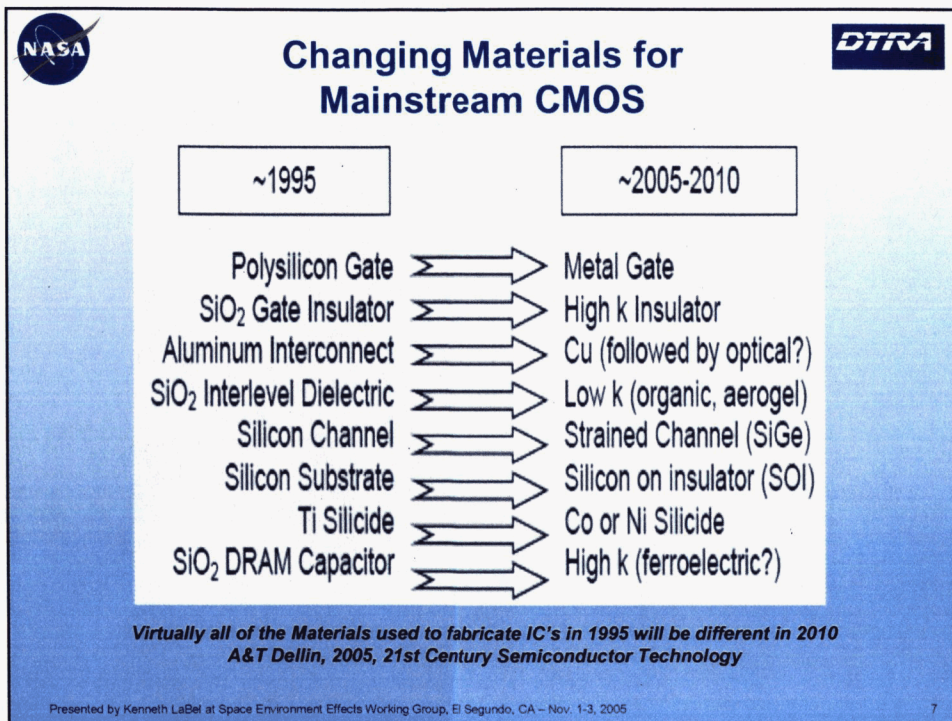



Changes in IC Attributes vs. Radiation Effects



| Attributes | SEU | MBU | SET | SEFI | SEGR | TID |
|-------------------------|-----|-----|-----|------|------|-----|
| Intelligence | ++ | ++ | + | ++ | - | - |
| Flexibility | ++ | ++ | - | +++ | - | + |
| Complexity | +++ | - | + | - | + | ++ |
| Integration Density | + | +++ | - | - | - | - |
| Hidden Circuit Features | + | - | - | +++ | - | - |
| Construction | ++ | ++ | ++ | ++ | ++ | ++ |
| Power | + | + | ++ | - | - | - |
| Speed | - | - | +++ | - | - | - |

+ = worse
 ++ = much worse
 +++ = very significant impact
 - = no effect


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005
8



Total Ionizing Dose – Summary trends



- Deep sub-micron ($<0.25\mu\text{m}$) CMOS basic structures have shown increasing tolerance to TID (thinner oxides)
 - $>100\text{ krad(Si)}$
- However,
 - Complex structures and those that require higher voltage fields such as charge pumps in flash memories or FPGAs may be MUCH more TID sensitive
 - Bipolar devices do not scale as easily and are susceptible to enhanced low dose rate sensitivity (ELDRS)
 - Failure at $\ll 100\text{ krad(Si)}$ at low space dose rates
 - Scaled CMOS devices observing ELDRS-like effect (Wiczak, 2005)

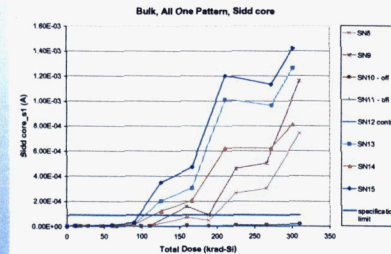

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005


9



Typical Ground Sources for Space Radiation Effects Testing



- Issue: TID
 - Co-60 (gamma), X-rays, Proton
 - Issue: Displacement Damage
 - Proton, neutron, electron (solar cells)
 - SEE (GCR)
 - Heavy ions, Cf
 - SEE (Protons)
 - Protons ($E>10\text{ MeV}$)
 - SEE (atmospheric)
 - Neutrons, protons
- ← TID is typically a local source with nearby ATE. All others require travel and shipping
– A constraint for how testing is done.

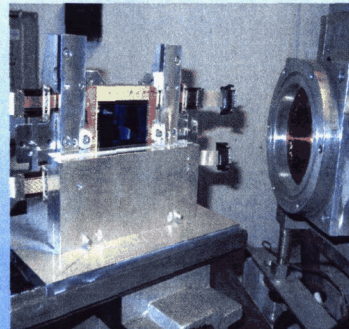

Wide Field Camera 3 E2V
2k x 4k n-CCD in front of Proton Beam at UC Davis

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005


10



Radiation Test Challenge – Fault Isolation

DTRA

- **Issue:** understanding what within the device is causing fault or failure.
 - Identification of a sensitive node.
- **Technology complications**
 - “Unknown” and increased control circuitry (hidden registers, state machines, etc..)
 - Monitoring of external events such as an interrupt to a processor limits understanding of what may have caused the interrupt
 - Example: DRAM
 - » Hits in control areas can cause changes to mode of operation, blocks of errors, changes to refresh, etc...
 - Not all areas in a device are testable

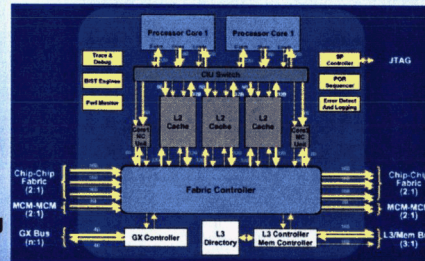

Power4 Processor Architecture

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005


11



Fault Isolation –(2)

DTRA

- **Example: SRAM-based reprogrammable FPGA-** measuring sensitivity of user-defined circuit
 - SEE in configuration area corrupts user circuitry function
 - Can cause halt, continuous misoperation, increased power consumption (bus conflicts), etc.
 - Often the sensitivity of the configuration latches overwhelm user circuitry sensitivity
 - Must have correct configuration to measure user circuit performance
- **Increased number of control structures in a device drives an increasing rate of single event functional interrupts (SEFIs)**

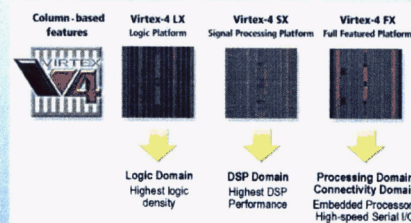

Complex new FPGA architectures include hard-cores: processing, high-speed I/O, DSPs, programmable logic, and configuration latches

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

12

| Chip Area | SEE Issue | Possible SEU Mitigation |
|--------------------|--|---|
| Config. Memory | Single and multiple bit errors corrupting circuit operation, causing bus conflicts (current creep), etc... | <ul style="list-style-type: none"> Scrubbing Partial reconfiguration |
| Config. Controller | Improper device configuration can occur if hit during configuration/reconfiguration | <ul style="list-style-type: none"> Partitioned design Multiple chip voting (Redundancy by using multiple devices) |
| CLB | Logic hits and propagated upsets caused by transients | <ul style="list-style-type: none"> Triple modular redundancy (TMR) Acceptable error rates |
| BRAM | Memory upsets in user area | <ul style="list-style-type: none"> TMR Error Detection and Correction (EDAC) scrubbing |
| Half-latches | Sensitive structure used in configuration/routing | <ul style="list-style-type: none"> Removal of half-latches from design |
| POR | SEUs on POR can cause inadvertent reboot of device | <ul style="list-style-type: none"> Multiple chip voting (Redundancy by using multiple devices) |
| IOB | SEUs can cause false outputs to other devices or inputs to logic | <ul style="list-style-type: none"> Leverage Immune Config. Memory cell Evaluate input SET propagation |
| DCM | Can cause clock errors that spread across clock cycles | <ul style="list-style-type: none"> TMR Temporal TMR |
| DSP | Hard IP that is unhardened that can cause single event functional interrupts (SEFIs) or data errors | <ul style="list-style-type: none"> TMR Temporal TMR |
| MGT | Gigabit transceivers. Hits in logic can cause bursts or SEFIs. O/w bit errors in data stream | <ul style="list-style-type: none"> TMR Protocol re-writes |
| PPC | Hard IP that is unhardened. SEFIs are prime concern | <ul style="list-style-type: none"> TMR or software task redundancy |
| SEL | Higher current condition that is potentially damaging | <ul style="list-style-type: none"> No mitigation other than substrate addition (epi). Circumvention techniques possible |

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

13

Fault Isolation –(3)

- Macrobeam structure: implies probabilistic chance of hitting a single node that may be sensitive
 - If test is run for SEE, typical heavy ion test run is to 1×10^7 particles/cm².
 - Ex., SDRAM – 512 Mb (5×10^8 bits plus control areas)
 - If all memory cells are the same, no issue. BUT if there are weak cells how do you ensure identifying them?
 - Control logic may be a very small area of the chip. If you fly 1000 devices, area is no longer “small”
 - Difficult to evaluate clock edge sensitivity of a node
 - Die access (required for most single event testing)
 - Typical heavy ion single event macrobeam simulators have limited energy range
 - Implies limited penetration through packaged device
 - Access to die typically required
 - Overlayers, metalization, etc must be taken into account

Low Energy Ion

High Energy Ion

Silicon

Device Under Test (DUT)
Package Material

| Facility | Ion (Energy) | LET (Si) | Range in Si (μm) | Peak LET |
|----------|--------------|----------|------------------|----------|
| NSCL | Xe (3.2 GeV) | 40 | 272 | 69 |
| TAMU | Ar (2 GeV) | 5.9 | 390 | 18 |

Table assumes ion traverses 1.5 mm plastic; LET given in MeV-cm²/mg

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005



14



Fault Isolation –(4)

- Standard microbeam and laser test facilities have similar limitations for range of particle
 - On older technologies, these facilities are used to determine what structure within a device is causing fault/failure
 - New technique (two-photon absorption - TPA) with the laser is being developed, but is still in research phase
 - New test structures built specifically for test may be required
 - Reduced metalization, special packaging, etc.

TPA is a new technique to overcome some of the test limitations from packaged device and metalization issues.
Courtesy Dale McMorrow, NRL

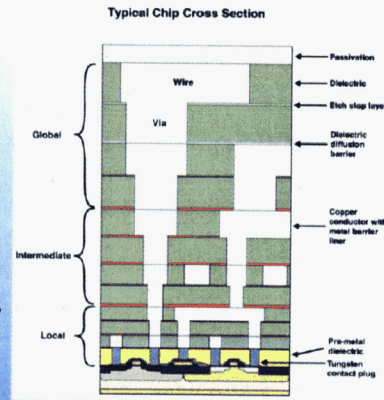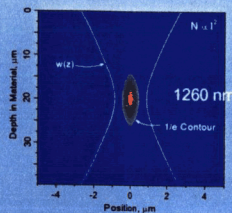


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

15



Radiation Test Challenge – Geometry

- Issue: the scaling of feature size and closeness of cells
- Technology complications
 - Multiple node hits with a single heavy ion track
 - Because of the closeness of transistors and thinness of the substrate material, a single particle strike can effect multiple nodes potentially defeating hardening schemes.

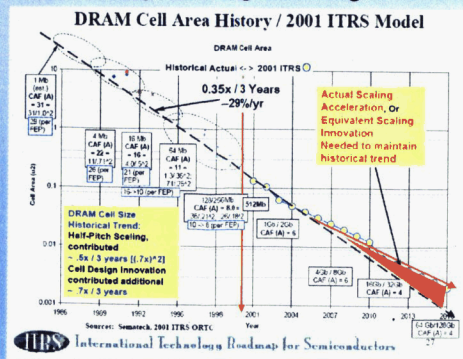


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

16



Geometry Implications (2)

- Multiple node hits (cont'd)
 - Ex., memory array
 - A single particle strike can spread charge to multiple cells. If the cells are logically as well as physically located
 - Standard memory scrub techniques such as Hamming Code can be defeated
 - This is not new, simply exacerbated by scaling. Traditional SEU modeling considers particle strikes directly on a transistor
 - Charge spreading for strikes near but not on the transistor can generate errors
 - Measured error cross-sections may exceed physical cross-sections
 - Albeit actual individual targets are smaller for a single particle
 - More targets and the spread of non-target hits implied potentially increased error rates per device
 - The role of particle directionality and of secondaries requires future use of physics-based particle interaction codes coupled with circuit tools.
 - GEANT4, MCNPX, etc. are the type of codes required
 - Efforts begun to turn these into tools and not just science codes

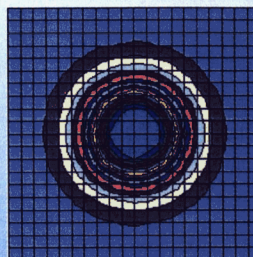

Charge spreading from a single particle in an active pixel sensor (APS) array impacts multiple pixels


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

17



Geometry Implications (3)

- High-aspect ratio electronics
 - For “standard” devices, the direction of the secondary particles produced from a proton (or neutron) are considered omnidirectional
 - However, for electronics where there is a high-aspect ratio (very thin with long structure), this is not the case
 - The forward spallation of particles when the proton enters the device along the long structure increases the potential error measurement cross-section
 - Test methods and error rate predictions need to consider this

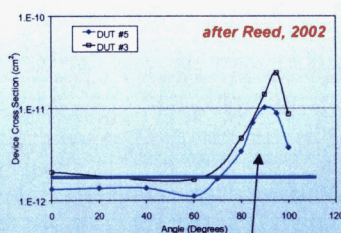

Effects of protons in SOI with varied angular direction of the particle;
Blue line represents expected response with “standard” CMOS devices.


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

18



Geometry Implications (4)

- Ultra-thin oxides provide two concerns
 - Single particles rupturing the gate
 - This is a function of the thinness and the current across a gate oxide
 - The impact of oxide defects
 - Role for TID
- Secondaries from packaging material
 - Even on the ground, particle interaction with packaging materials can cause upsets to a sensitive device
 - Ex., Recent FPGA warning of expectation of up to 1 upset/spontaneous reconfiguration a day!
- Small probability events have increased likelihood of occurring
 - If 1 in a 10^9 particles causes a “larger” LET event or 1 in 10^6 transistors can cause a more complex error
 - With billion plus transistor devices and potential use of >1000 of the same device (re: solid state recorders), small probabilities become finite

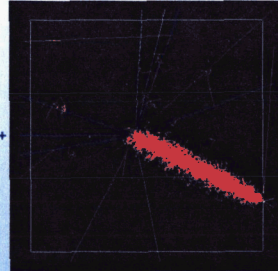

Sample 100 MeV proton reaction in a 5 um Si block. Reactions have a range of types of secondaries and LETs. (after Weller, 2004)


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

19



Radiation Test Challenge – Speed Implications

- Issue: the increasing device speeds (>> GHz) impact testing, test capability requirements, and complicate effects modeling.

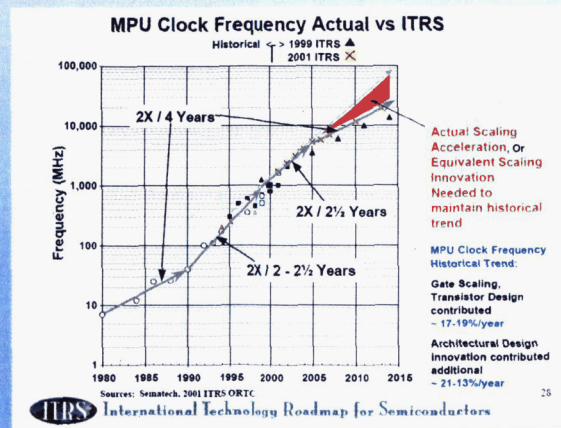

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

20




Speed (2)


- Technology Complications

- Propagation of single event transients (SETs)

- As opposed to a direct upset by a particle strike on a latch-structure, the particle hit causes a transient (think hit on a combinatorial logic or such) that can propagate to change the state of a memory structure down the chain.
 - The transient pulse width can be on the order of picoseconds to nanoseconds (or longer depending on circuit response)
 - Older, slower devices didn't recognize the transient (i.e., minimum pulse width required for circuit response was greater than that generated by a single particle)
 - » Newer devices can now respond to these hits increasing circuit error rates
 - Transient size in analog devices has been seen to be a partial function of the range of the particle entering the device
 - » Impacts facility usage choices

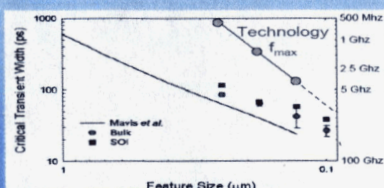

Critical width for unattenuated propagation of SETs decreases with feature size, Dodd-04

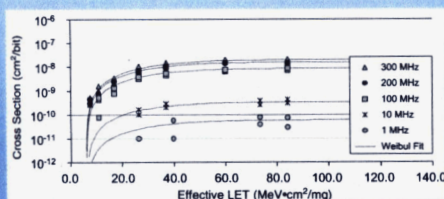

DSET for 0.18 μm vs Freq Benedetto-04

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

21





Speed (3)

- Propagation of SETs (cont'd)

- Crossover appears in the ~400-500 MHz regime

- Charge generation can now last for multiple clock cycles
 - Impact is to defeat hardening schemes that assume only a single clock cycle is affected

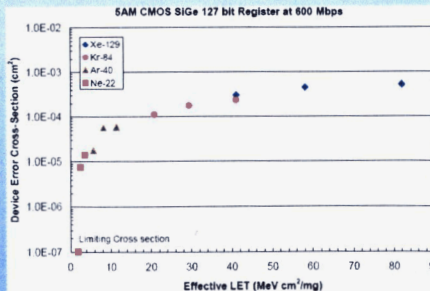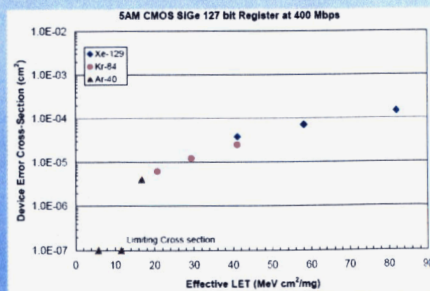

Marshall-04


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

22




Speed (4)

DTRA

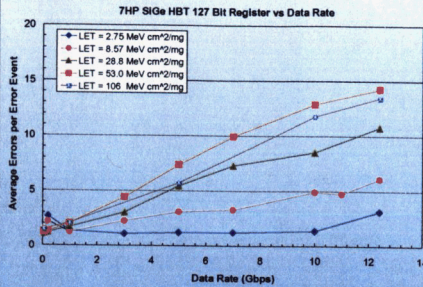

Average number of errors noted by a single particle event increases with speed and LET

Marshall-04

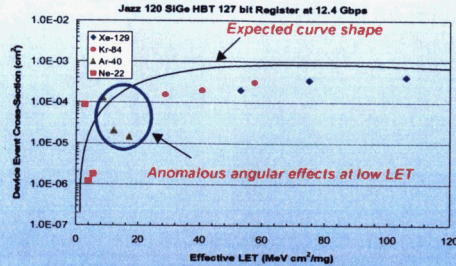

Effects of heavy ions on SiGe devices at 12 GHz speeds notes anomalous charge collection of this high-speed technology; Drawn line represents expected response with "standard" models.

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

23




Speed (5)

DTRA

Testing at a remote facility requires highly portable test equipment capable of high-speed measurements

- Tester needs to be near the device or utilize high-speed drivers
 - Cable runs between the device under test (DUT) and the tester can be up to 75 feet
- Simple devices like a shift register chain can be tested using bit error rate testers (BERTs)
 - BERTs can run to ~\$1M and tend to be very sensitive to problems from shipping
 - At proton test facilities secondaries are generated (neutrons) that can cause failures in the expensive test equipment if they are located near the DUT
- Self-test techniques for testing devices being developed for shift-registers
 - Modern reconfigurable FPGA-based test boards being developed to test more generic devices

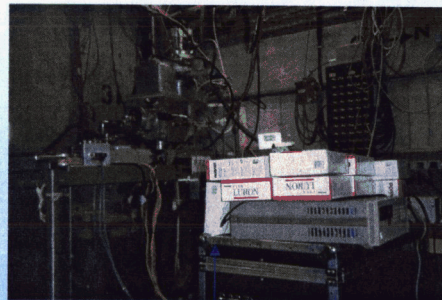

Beware of stray neutrons impinging on your test equipment.

Here, Borax is shown on top of a power supply to absorb neutrons.

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

24



Speed (6)



- **Testing in a vacuum chamber implies mechanical, power/thermal, and hardware mounting constraints**


- High-speed devices often mean high power consumption

- Issue is mounting of DUT in vacuum chamber and removal of thermal heat

- Can also be a challenge NOT in a vacuum
- DUT may need to be custom packaged to allow for thermal issues

- Active system required for removal of heat

Brookhaven National Laboratories' Single Event Upset Test Facility (SEUTF)

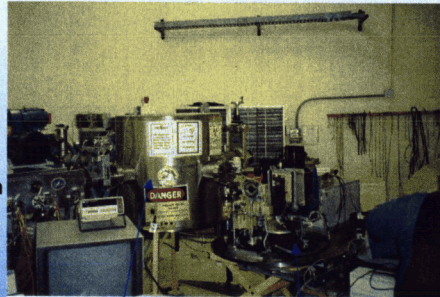

Vacuum Chamber

User equipment area

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005


25




Specialty Packaging for Radiation Test



- Thermal, Speed, Power

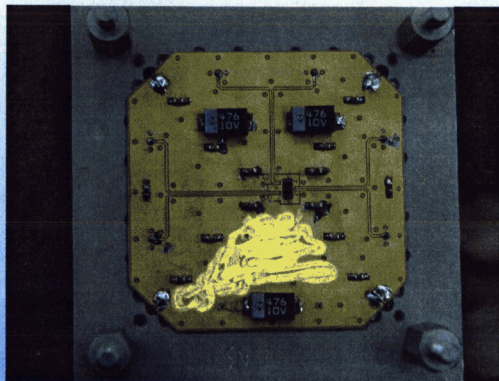

Front

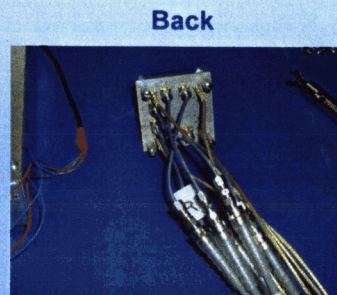


Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

26



Sample Modeling Shortfalls

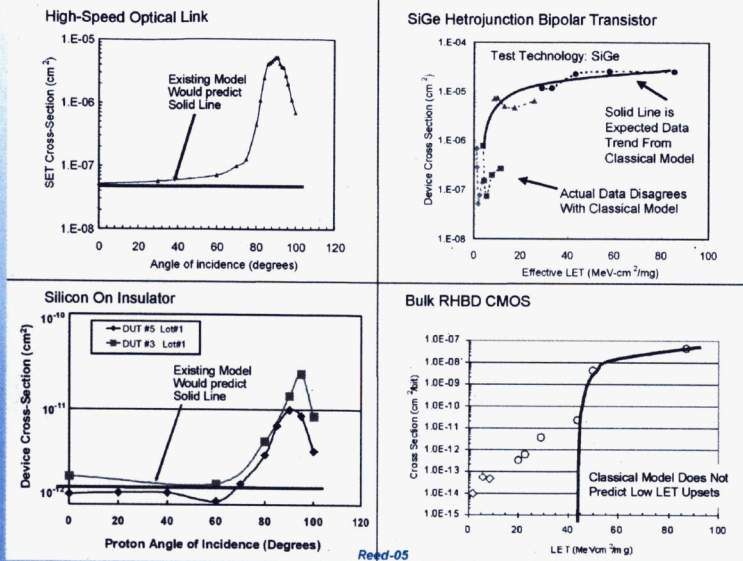

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

27



Radiation Status for Advanced Electronics

| Radiation Response | Guideline Document | Test Method | Data Base | Modeling & Simulation |
|---------------------|--------------------|-------------|-----------|-----------------------|
| SEU/MBU | Yes | Yes | Yes | ~ mature |
| SET | No | No | No | No |
| SEL | No | Yes | Yes | No |
| SEGR | No | No | No | No |
| SEFI | No | No | No | No |
| TID | Yes | Yes | Yes | Yes |
| Displacement Damage | Yes | Yes | No | No |

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

28



Summary and Comments




- We have presented a brief overview of **SOME** of the radiation challenges facing emerging scaled digital technologies

- Implications on using consumer grade electronics
- Implications for next generation hardening schemes

- **Comments**

- Commercial semiconductor manufacturers are recognizing some of these issues as issues for terrestrial performance
 - Looking at means of dealing with soft errors
- The thinned oxide has indicated improved TID tolerance of commercial products
 - Hardened by “serendipity”
 - Does not guarantee hardness or say if the trend will continue
 - Reliability implications of thinned oxides

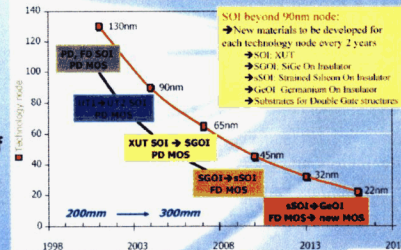

Next Generation SOI:
Weak or no body ties will not solve SEU problems

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

29



The Top Five Research/Development Areas Required for Radiation Test and Modeling – Author's Opinions



- **5 Understanding extreme value statistics as it applies to radiation particle impacts**
- **4 System Risk Tools**
- **3 High-Energy SEU Microbeam and TPA Laser**
- **2 Portable High-Speed Device Testers**
- **1a Physics Based Modeling Tool**
- **1b Development of substrate engineering processing methods to decrease charge generation and enhance recombination**

Presented by Kenneth LaBel at Space Environment Effects Working Group, El Segundo, CA – Nov. 1-3, 2005

30